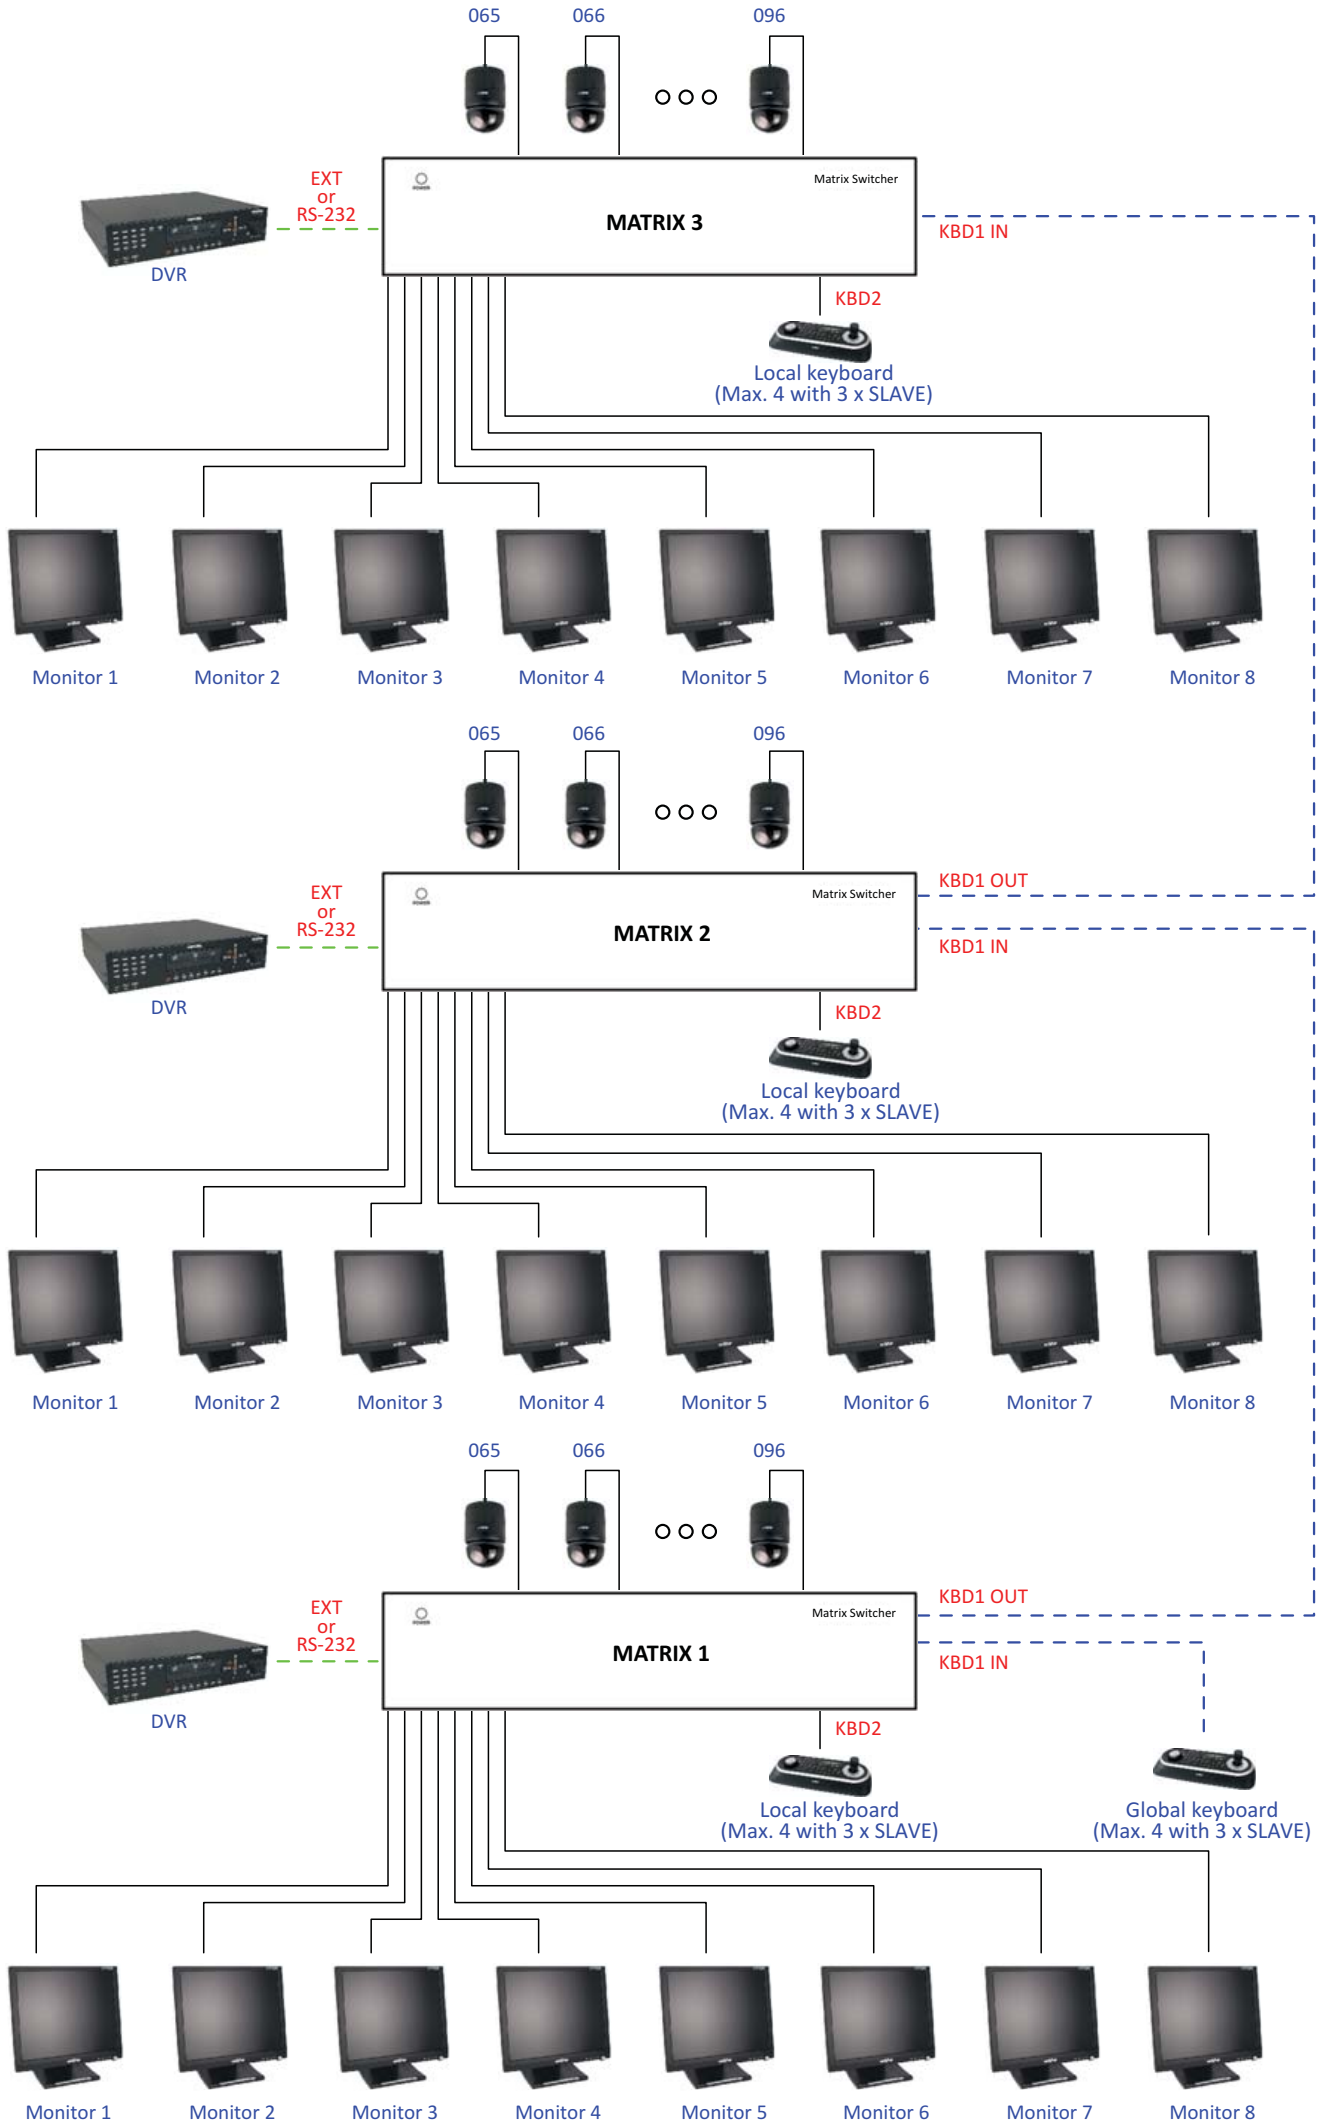
065
066
096
Matrix Switcher
MATRIX 3
EXT
or
RS-232
DVR
KBD1 IN
KBD2
Local keyboard
(Max. 4 with 3 x SLAVE)
Monitor 1
Monitor 2
Monitor 3
Monitor 4
Monitor 5
Monitor 6
Monitor 7
Monitor 8
065
066
096
Matrix Switcher
MATRIX 2
EXT
or
RS-232
DVR
KBD1 OUT
KBD1 IN
KBD2
Local keyboard
(Max. 4 with 3 x SLAVE)
Monitor 1
Monitor 2
Monitor 3
Monitor 4
Monitor 5
Monitor 6
Monitor 7
Monitor 8
065
066
096
Matrix Switcher
MATRIX 1
EXT
or
RS-232
DVR
KBD1 OUT
KBD1 IN
KBD2
Local keyboard
(Max. 4 with 3 x SLAVE)
Global keyboard
(Max. 4 with 3 x SLAVE)
Monitor 1
Monitor 2
Monitor 3
Monitor 4
Monitor 5
Monitor 6
Monitor 7
Monitor 8